


INA86 pin description

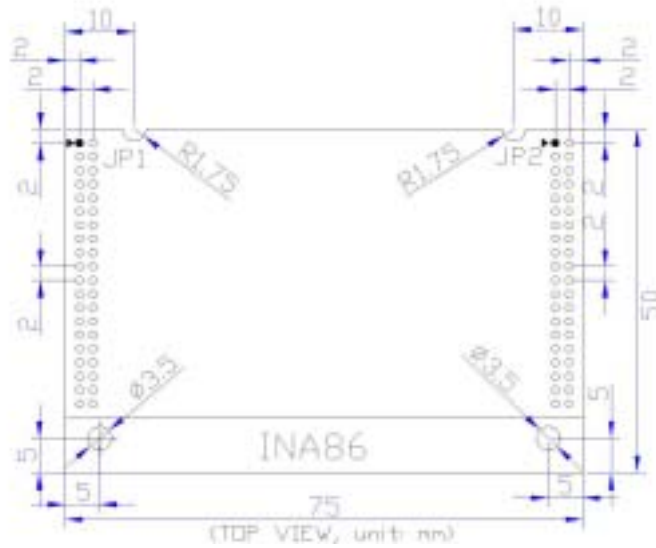

JP1					JP2						
1	RESET#	I	2	ARDY	I	41	GND		42	GND	
3	RD#	O	4	WR#	O	43	TPTX+	O	44	TPTX-	O
5	VCC_33		6	GND		45	GND		46	GND	
7	A0	O	8	A1	O	47	TPRX+	I	48	TPRX-	I
9	A2	O	10	A3	O	49	GND		50	GND	
11	A4	O	12	A5	O	51	LED_LINK	O	52	LED_FDLX	O
13	A6	O	14	A7	O	53	LED_10_ACT	O	54	LED_100_ACT	O
15	A8	O	16	A9	O	55	LED_COL	O	56	VCC_33	
17	A10	O	18	A11	O	57	INT0	I	58	INT1	I
19	A12	O	20	A13	O	59	INT2	I	60	GND	
21	A14	O	22	A15	O	61	PIO0	I/O	62	PIO1	I/O
23	VCC_33		24	GND		63	PIO27	I/O	64	PIO28	I/O
25	D0	I/O	26	D1	I/O	65	PIO29	I/O	66	PCS0#	O
27	D2	I/O	28	D3	I/O	67	PCS1#	O	68	PCS2#	O
29	D4	I/O	30	D5	I/O	69	PCS3#	O	70	ISP#	I
31	D6	I/O	32	D7	I/O	71	RXD0	I	72	TXD0	O
33	D8	I/O	34	D9	I/O	73	CTS0	I	74	RTS0	O
35	D10	I/O	36	D11	I/O	75	RXD1	I	76	TXD1	O
37	D12	I/O	38	D13	I/O	77	CTS1	I	78	RTS1	O
39	D14	I/O	40	D15	I/O	79	GND		80	VCC_33	